The First Time for Installation

1. Hardware Instruction

Follow the steps below to set up your camera hardware.

1) Plug the network cable into the camera and then into your router.
2) Plug the power adapter into the camera and then into the power outlet.
3) Please make sure the ip camera and the computer use the same router

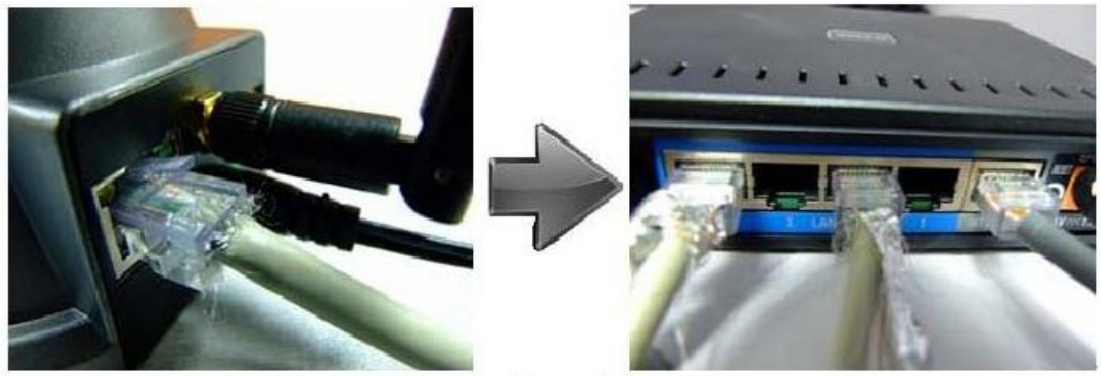

Figure 1.3

2.Software installation

Software installation is the key to the successful use of this product.

1 Open the CD,find the software 

,install it

After the installation you can find two icons

appears on the Desktop automatically.

2. Double click the Icon “IP Camera Finder”

and a dialog box will pop up.

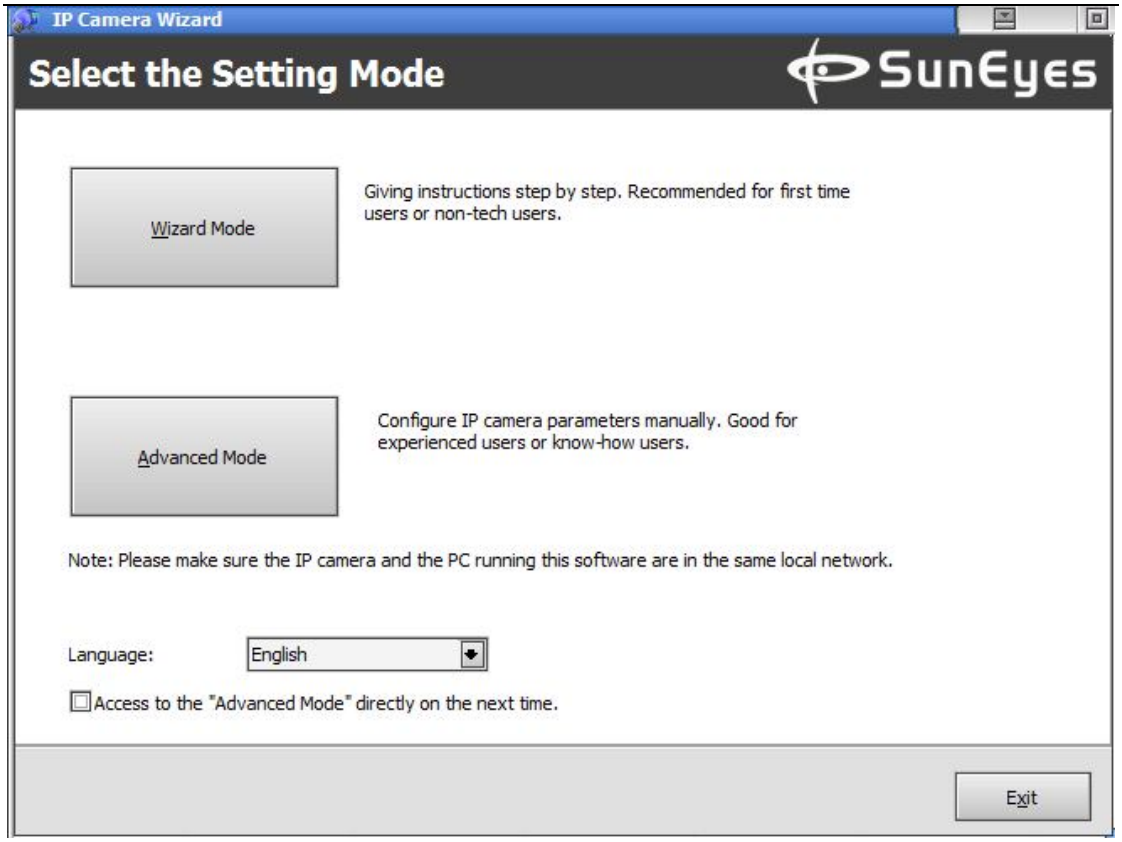
IP Camera Wizard
Select the Setting Mode
SunEyes
Wizard Mode
Giving instructions step by step. Recommended for first time users or non-tech users.
Advanced Mode
Configure IP camera parameters manually. Good for experienced users or know-how users.
Note: Please make sure the IP camera and the PC running this software are in the same local network.
Language:
English
Access to the "Advanced Mode" directly on the next time.
Exit

Wizard Mode(if you not familiar the settings pls chose this mode):

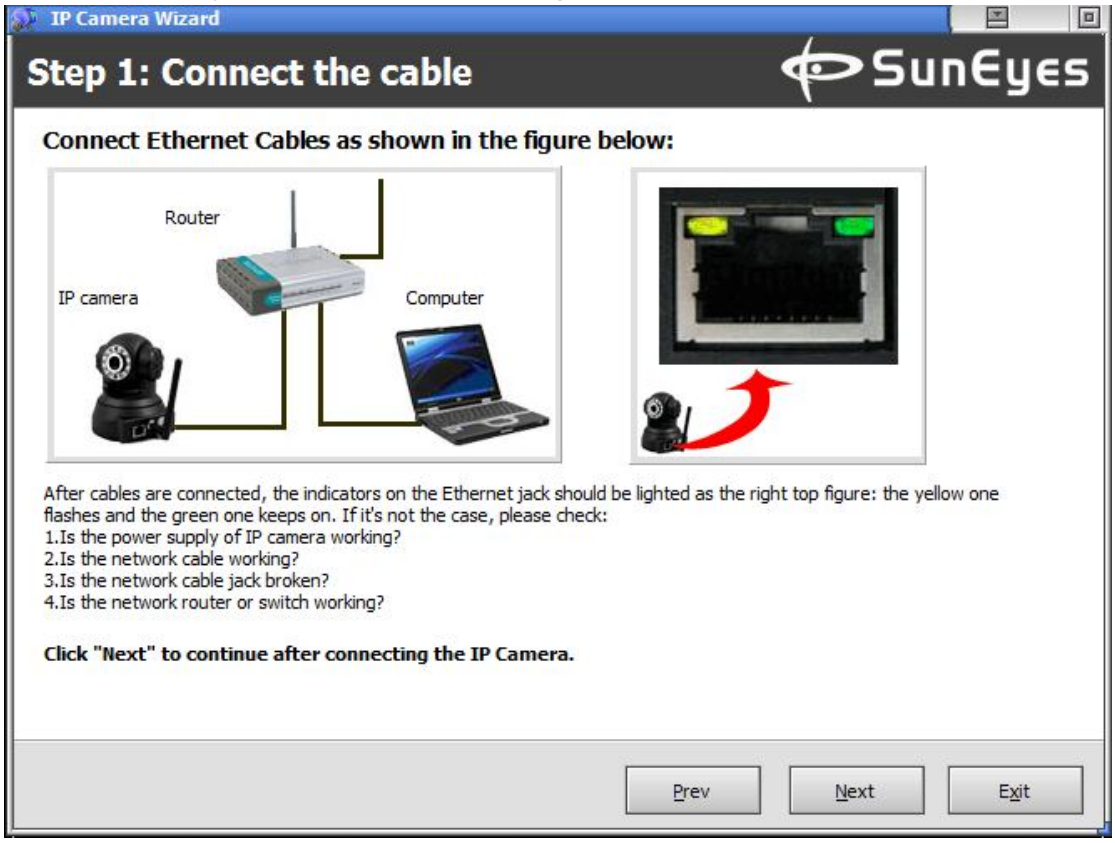
IP Camera Wizard
Step 1: Connect the cable
SunEyes
Connect Ethernet Cables as shown in the figure below:
Router
IP camera
Computer
After cables are connected, the indicators on the Ethernet jack should be lighted as the right top figure: the yellow one flashes and the green one keeps on. If it's not the case, please check:
1.Is the power supply of IP camera working?
2.Is the network cable working?
3.Is the network cable jack broken?
4.Is the network router or switch working?
Click "Next" to continue after connecting the IP Camera.
Prev
Next
Exit

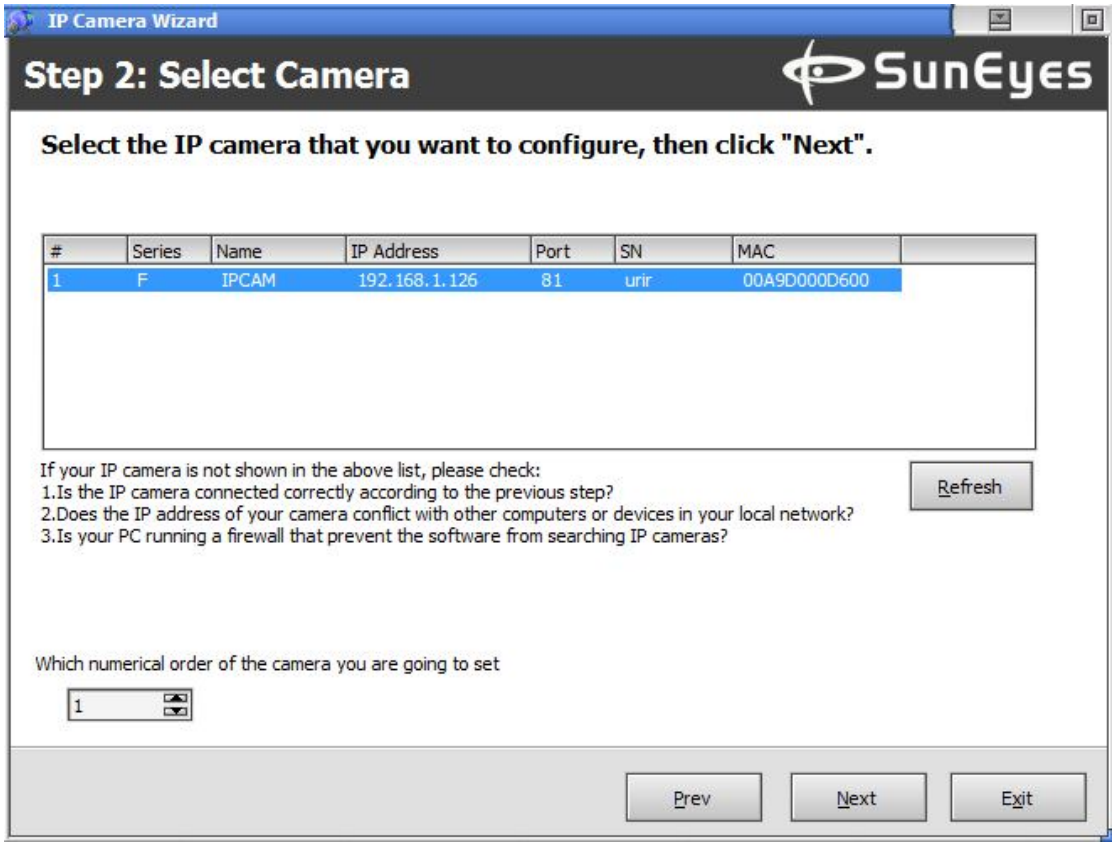
IP Camera Wizard
Step 2: Select Camera
SunEyes
Select the IP camera that you want to configure, then click "Next".
Series Name IP Address Port SN MAC
1 F IPCAM 192.168.1.126 81 urir 00A9D000D600
If your IP camera is not shown in the above list, please check:
1.Is the IP camera connected correctly according to the previous step?
2.Does the IP address of your camera conflict with other computers or devices in your local network?
3.Is your PC running a firewall that prevent the software from searching IP cameras?
Refresh
Which numerical order of the camera you are going to set
1
Prev
Next
Exit

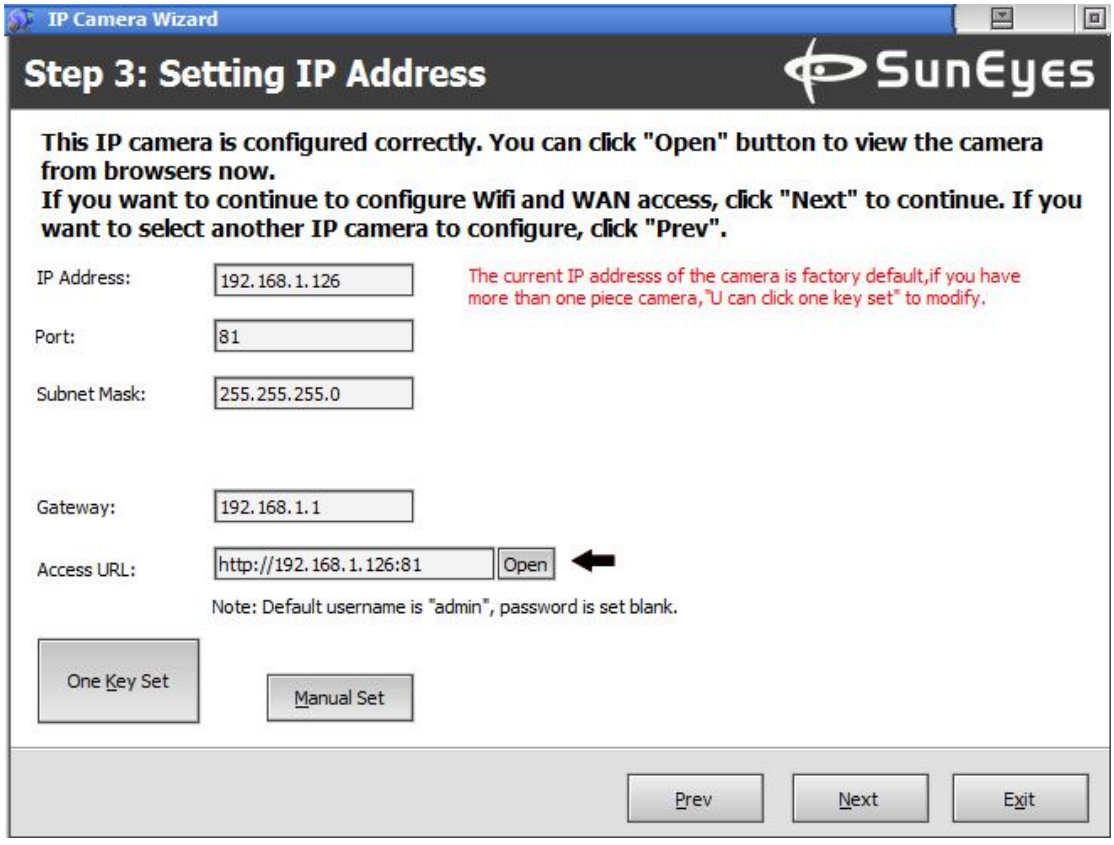
IP Camera Wizard
Step 3: Setting IP Address
SunEyes
This IP camera is configured correctly. You can click "Open" button to view the camera from browsers now.
If you want to continue to configure Wifi and WAN access, click "Next" to continue. If you want to select another IP camera to configure, click "Prev".
IP Address: 192.168.1.126
The current IP addresss of the camera is factory default,if you have more than one piece camera,"U can click one key set" to modify.
Port: 81
Subnet Mask: 255.255.255.0
Gateway: 192.168.1.1
Access URL: http://192.168.1.126:81 Open
Note: Default username is "admin", password is set blank.
One Key Set
Manual Set
Prev
Next
Exit

Advanced Mode (if you are already familiar with the settings pls chose this mode):

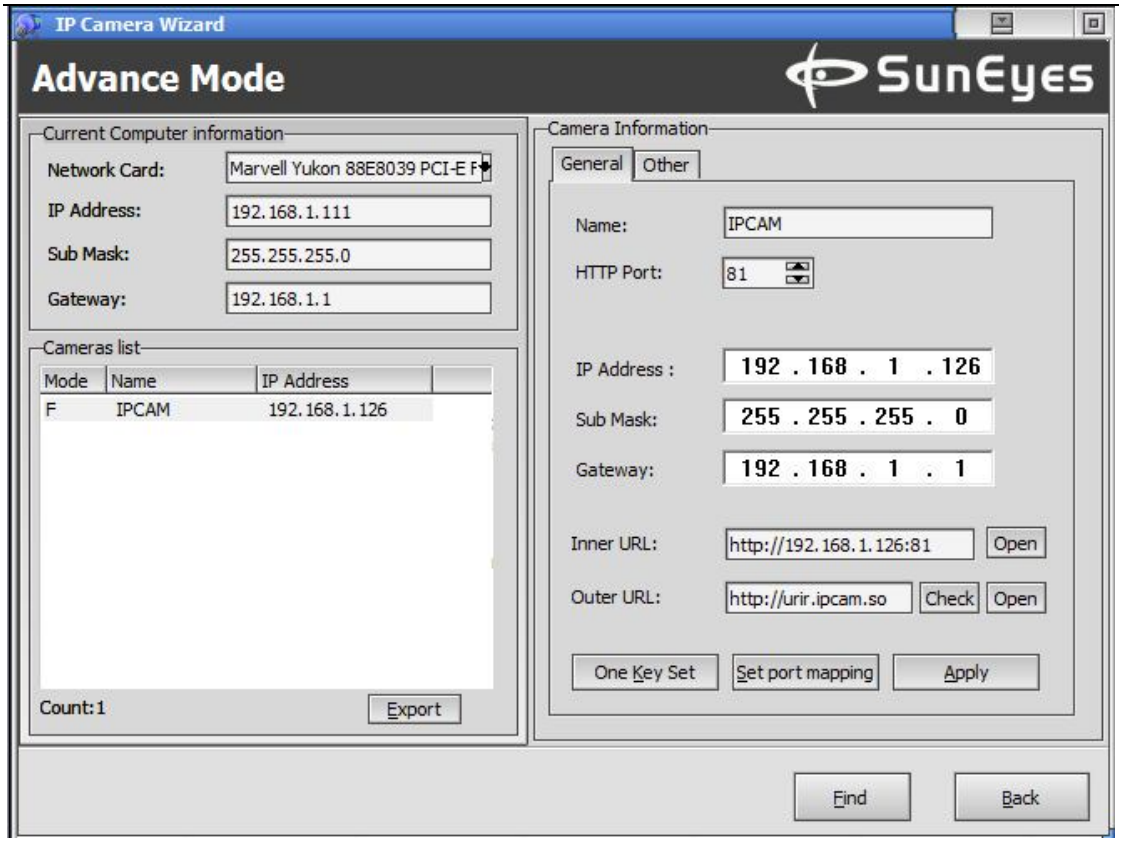

- **Basic Properties**

There are some device informations in the Basic Properties ,such as **Device MAC,System Firmware Version, Web UI Version.**

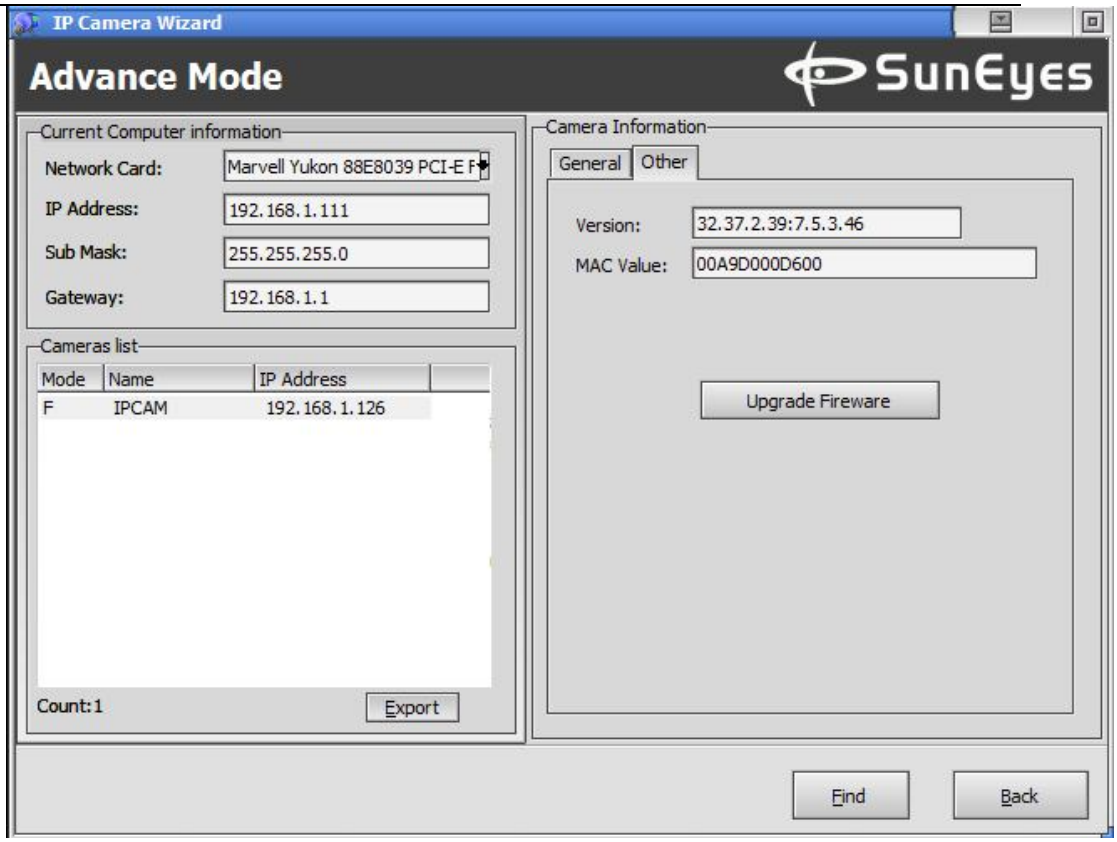

Note: The software searches IP Servers automatically over LAN.

1 .The ip camera and the pc should be in the same LAN

2 To install more than one cameras in the LAN,all of the cameras port and IP address can not be same.(like if your first camera ip is 192.168.1.126:81 ,then your second camera ip can be 192.168.1.127:82)

3. pls make sure the camera ip address is in the same subnet as the gateway (i,e .the first three sections are the same1,if not confirm about it ,can be use

)

4.Mask: The default subnet mask of the equipment is :255.255.255.0

5.Gateway: Make sure it is in the same subnet with PC IP address

6.DNS: IP address of IPS network provider.

7.Port:LAN port assigned for the equipment, usually 81-10000

8.User & Password : Default administrator username/password: admin/No password

2.2 Camera Login in IE (LAN)

You can access the camera through IP Camera Wizard or IE directly.

1) Click the inner access: “open”

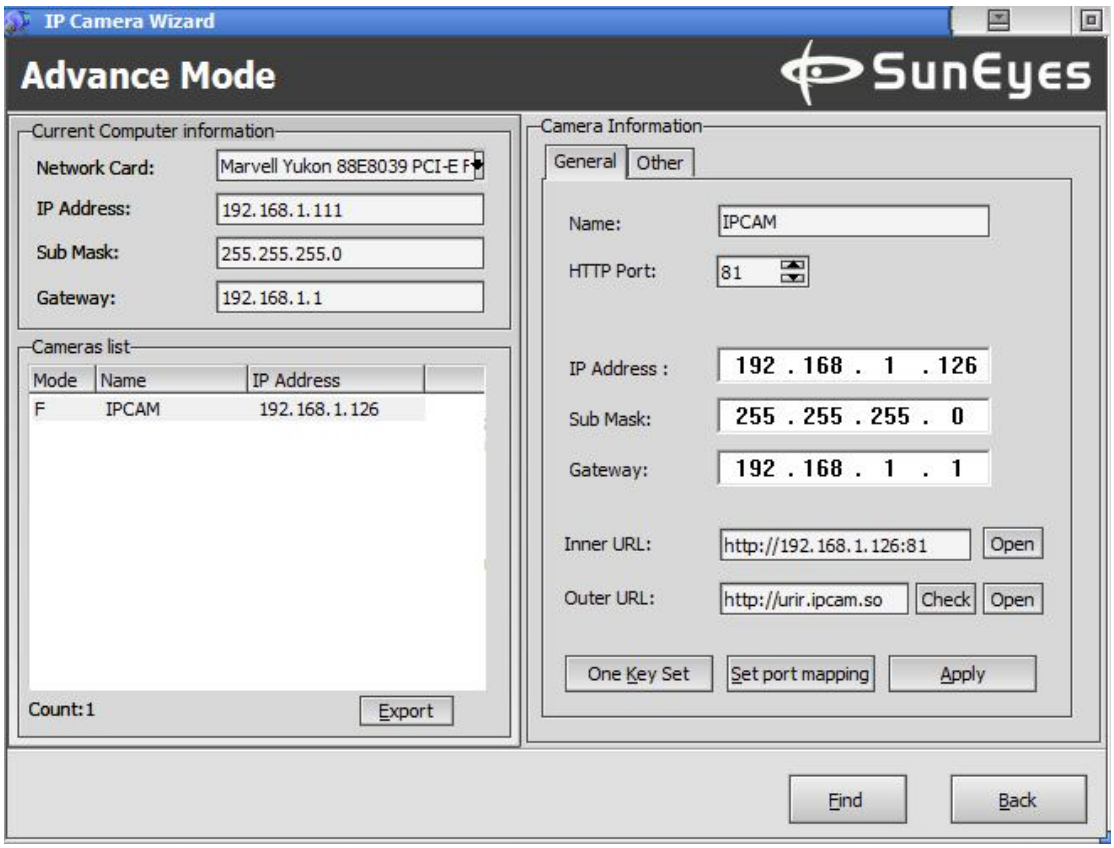

2) Or start your web browser and type in the camera’s IP address,Such as http://192.168.1.126:81

The Camera Login page pop-up.

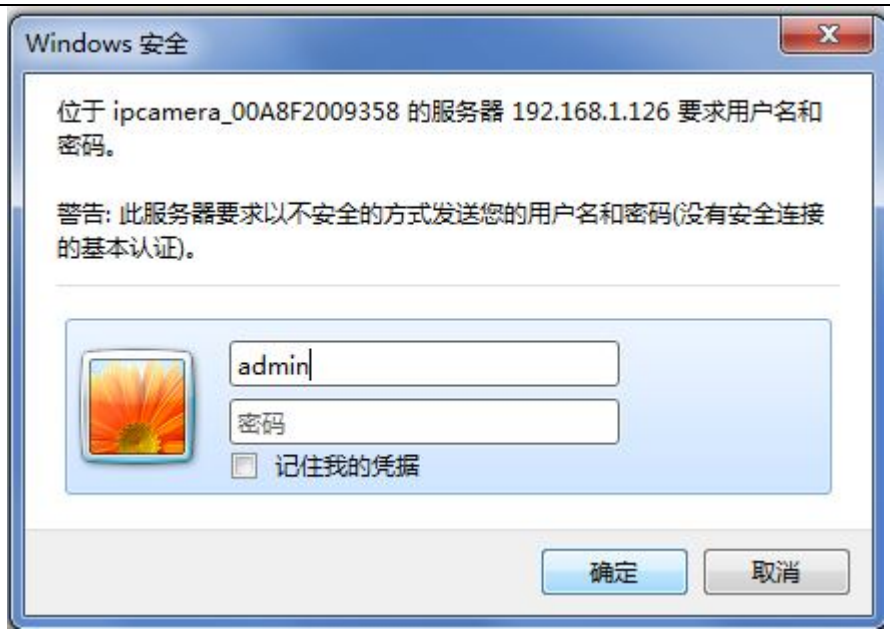

Enter your account and password on the login page as shown above

Administrator's username is: **admin** and no password… Sign in with ActiveX Mode(for IE)

Note:

1. **at the first time to login ,you need to download the ActiveX and after installation then fresh the page will be ok**

2. **If failed to install it,you can try to install it manually from disc,you can find it in disc or download from our webpage**

3. **Some time your firewall or anti-virus software will stop the installatoin of ActiveX,then you can try to close them first,**

4. **if still failed to install it,you can try to set the IE tool as below:IE browser--Tool--internet Proper--Security--Custom Level--ActiveX control and Plug-ins-all of the ActiveX control should be set as "enable".**